

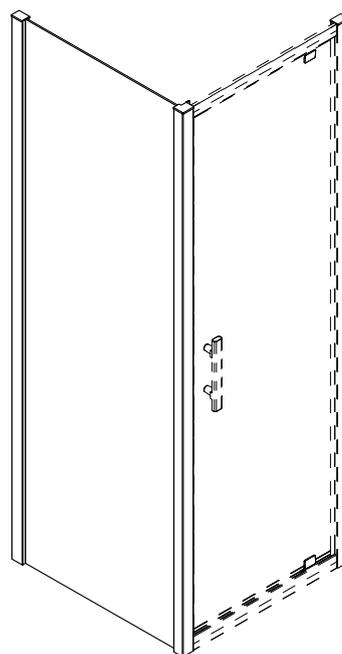
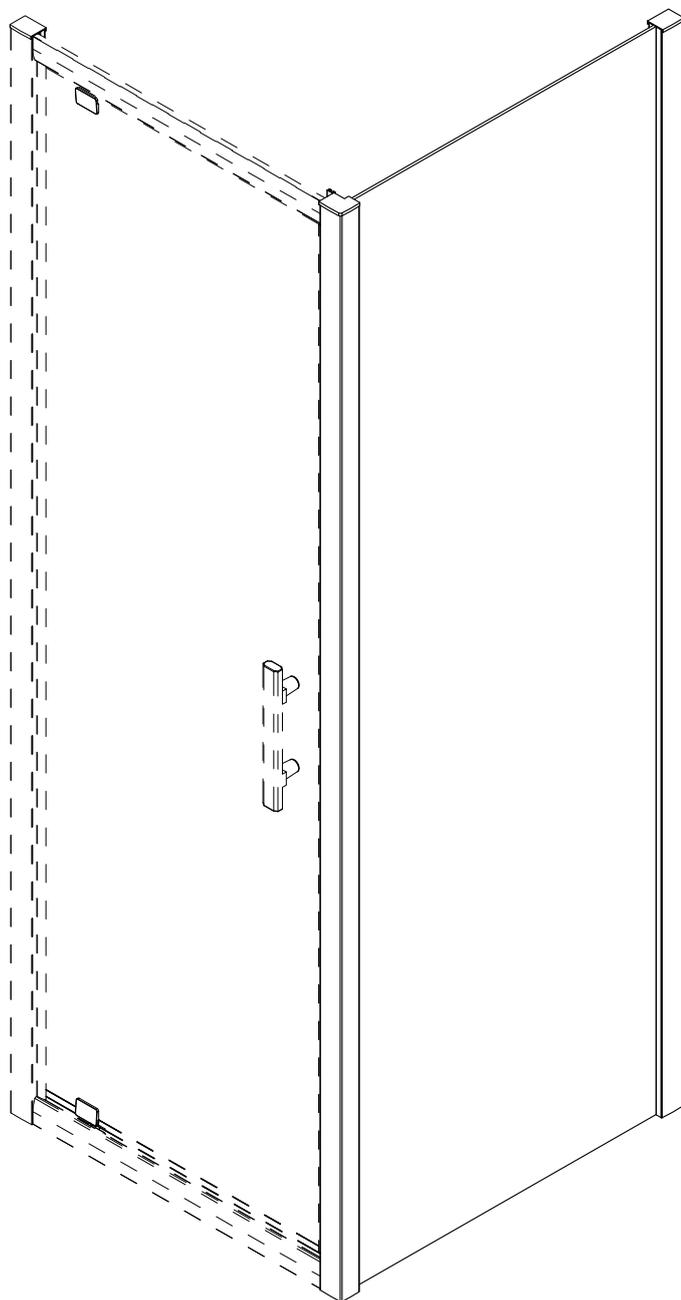







# Aqua i



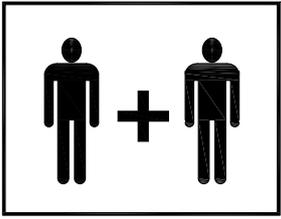

Ø6mm

Ø2.8mm




1



X1

2



X3


3



ST3.5X10

X3

4





X1

4

3


2





1

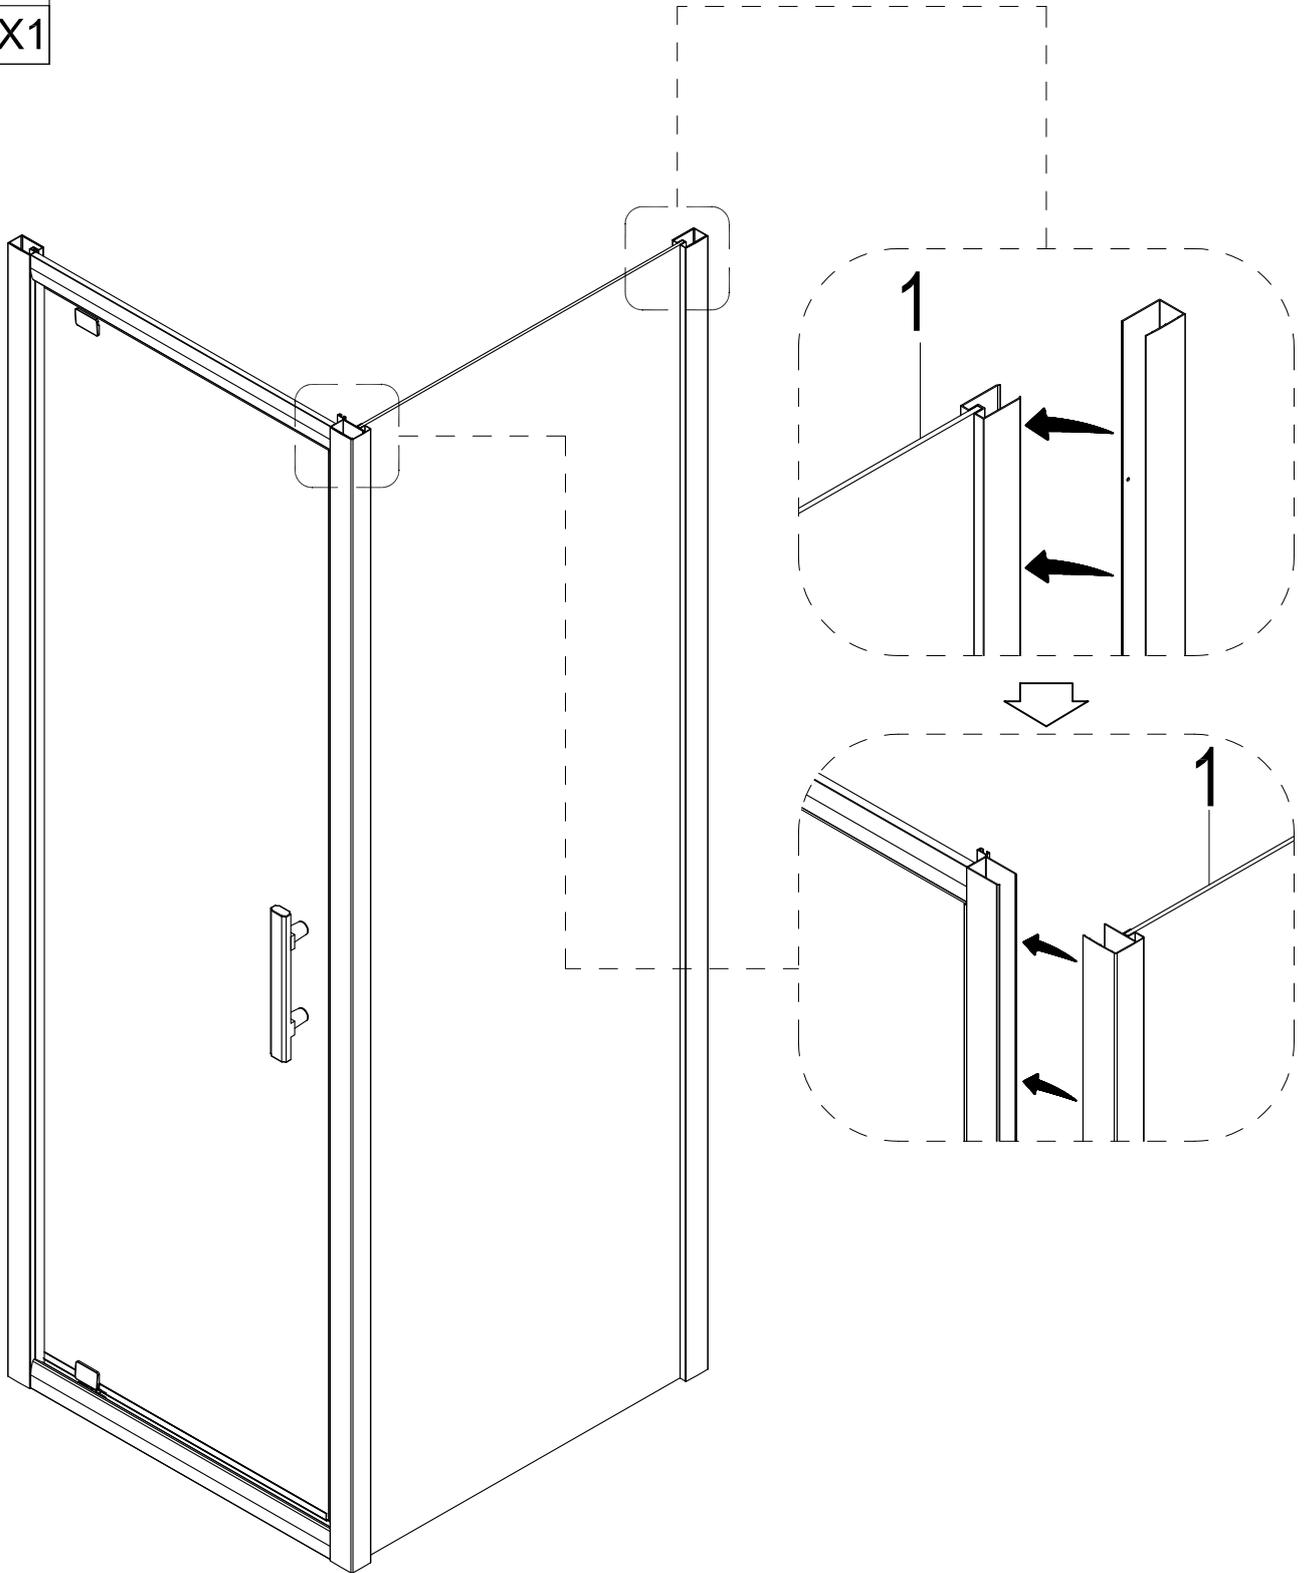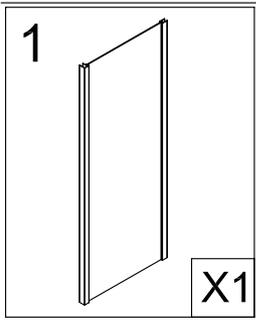







Please Note: Shower Doors and Enclosures are Showerproof and not Waterproof.


You should never install shower heads aimed in the direction of the door or aim the shower head directly at the glass because this can cause leaks.

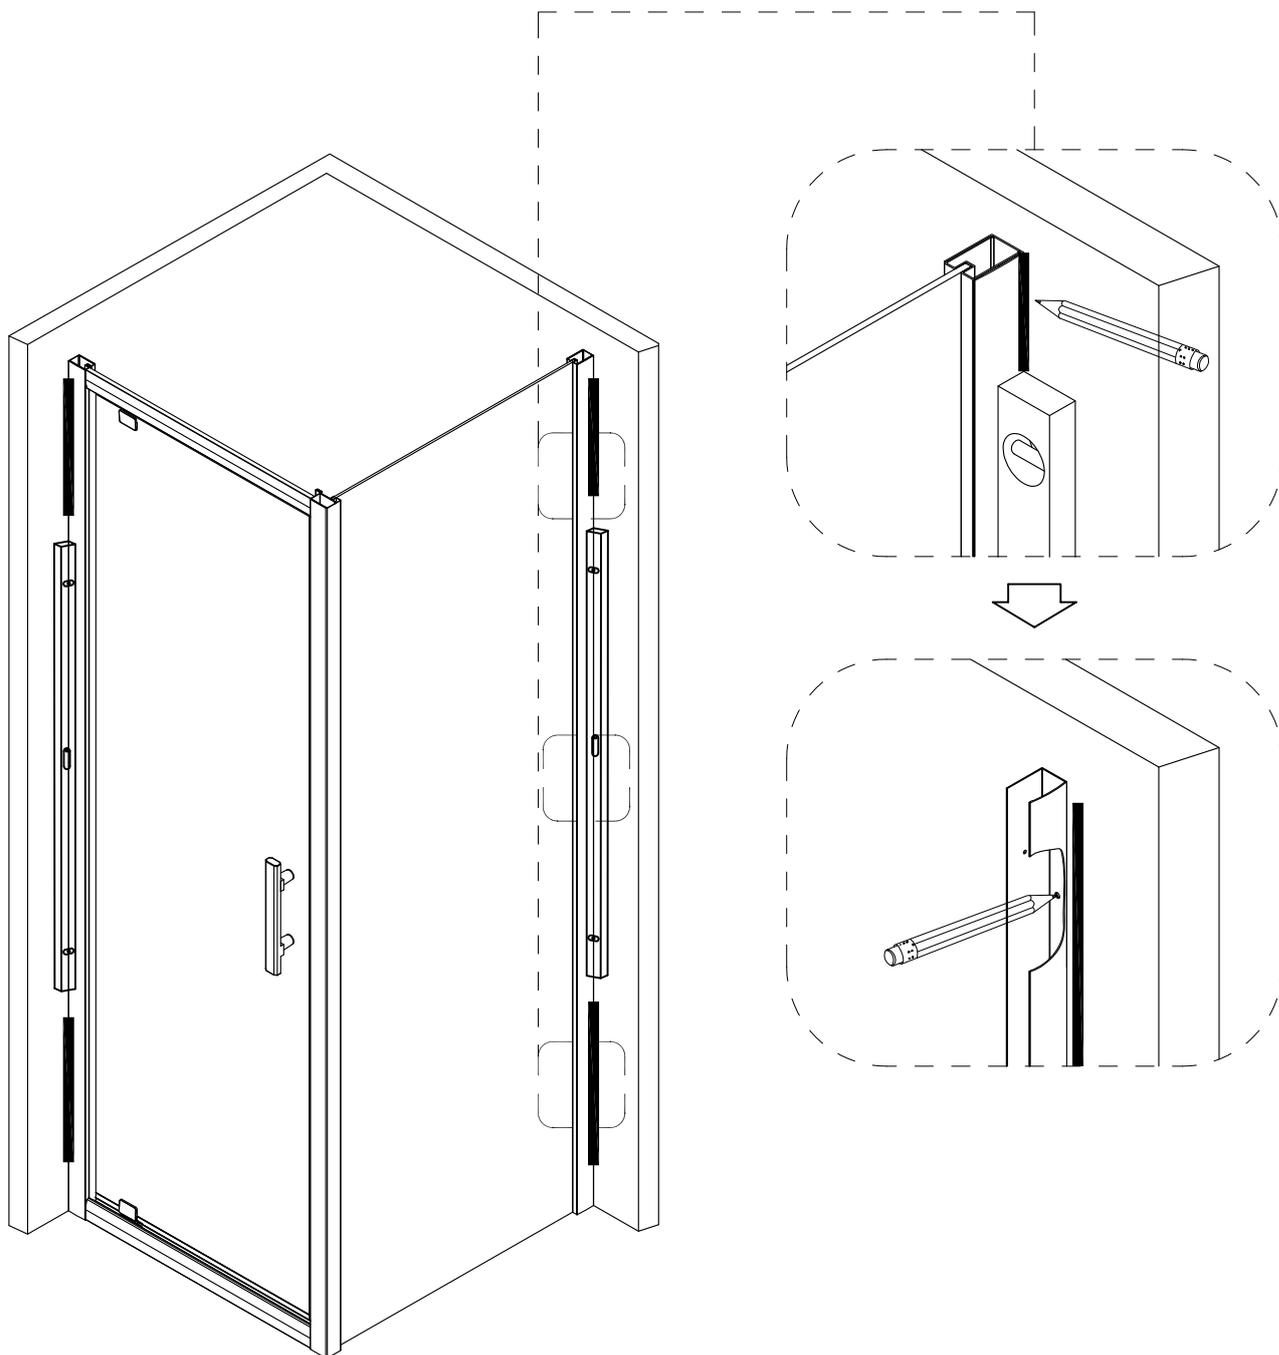




Ø6mm

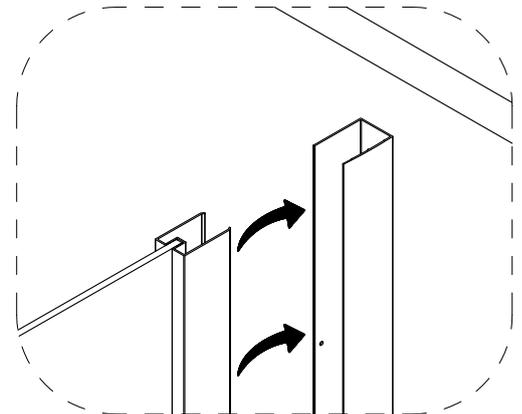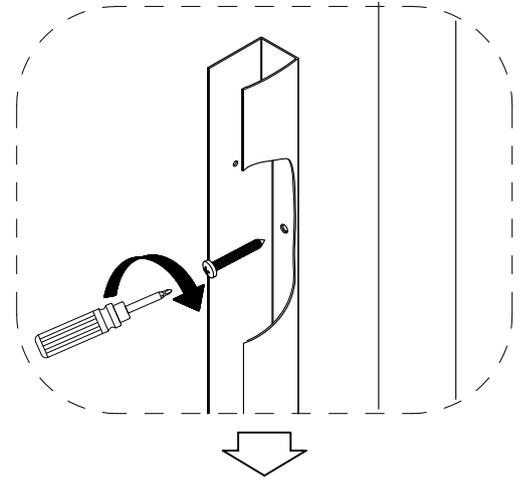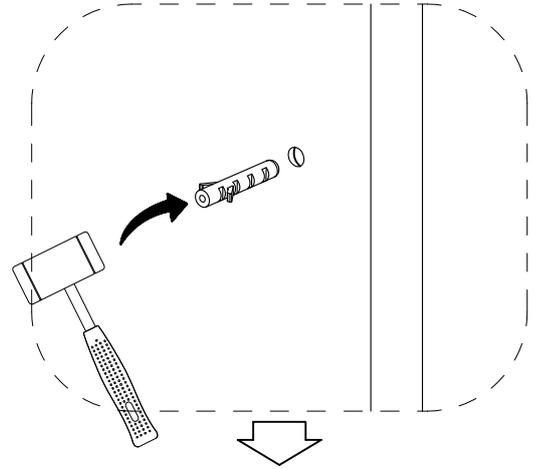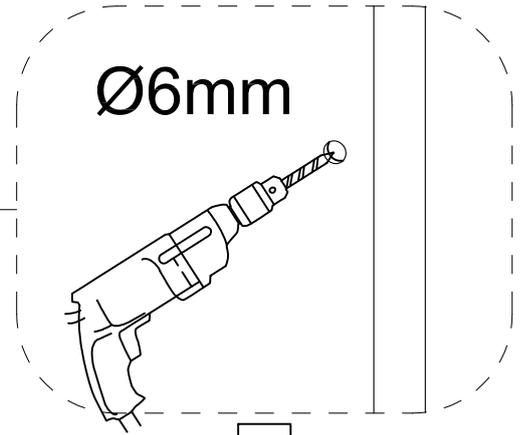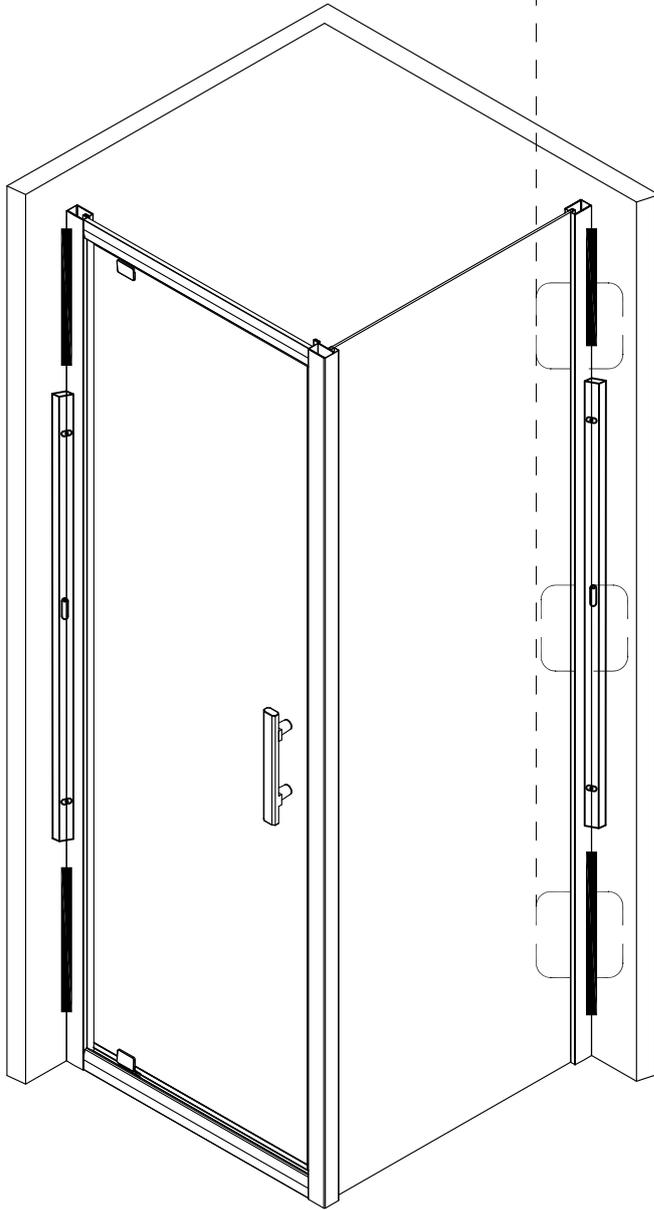



Ø2.8mm

2







X3

3




ST3.5X10

X3

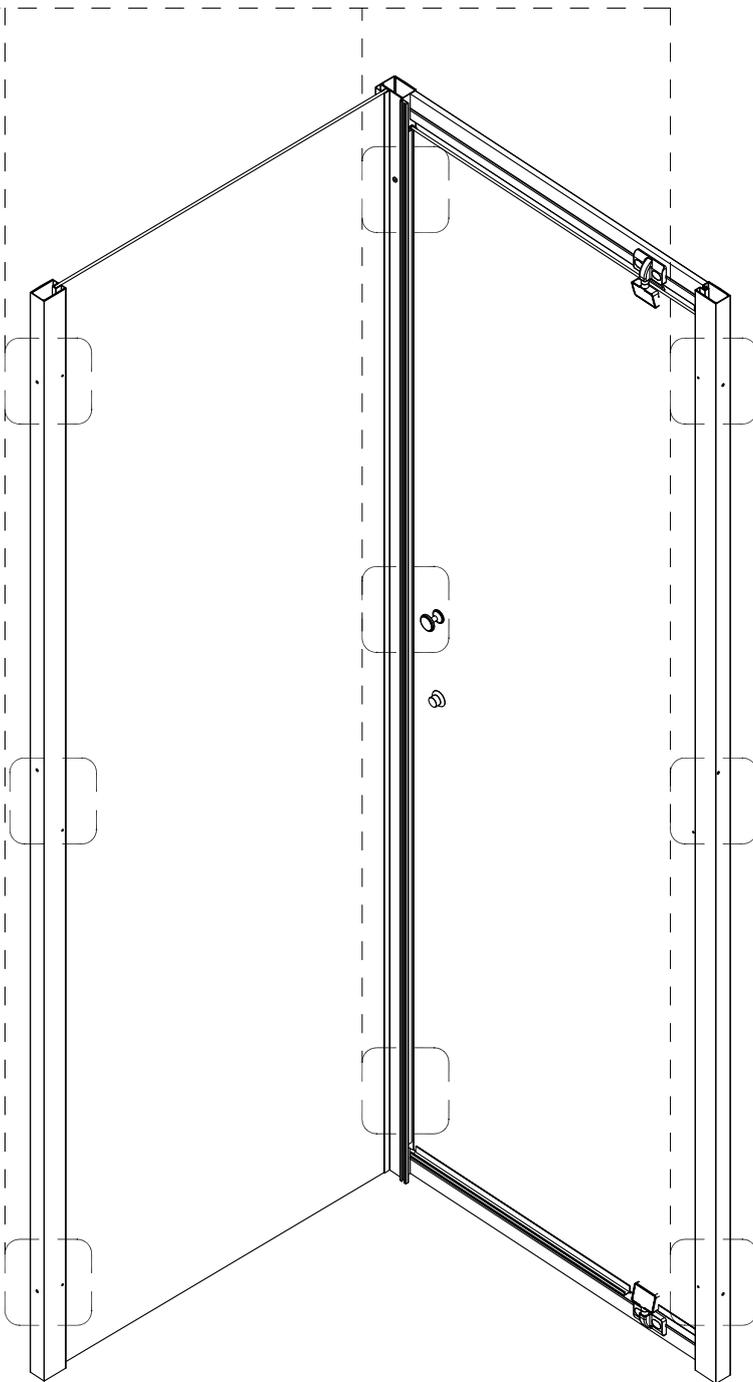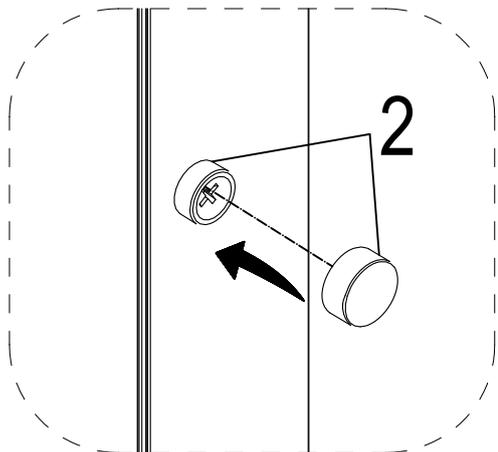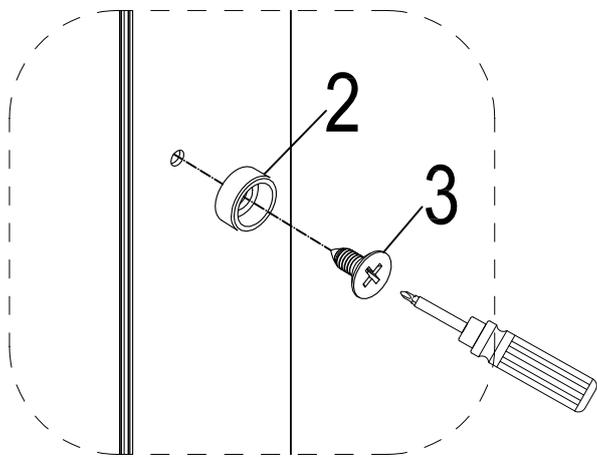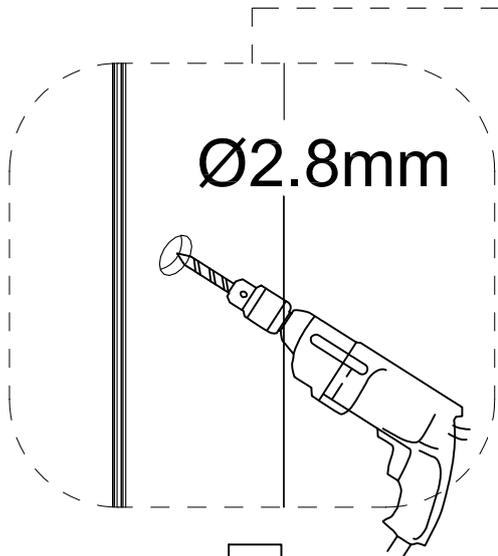

4



X1

