


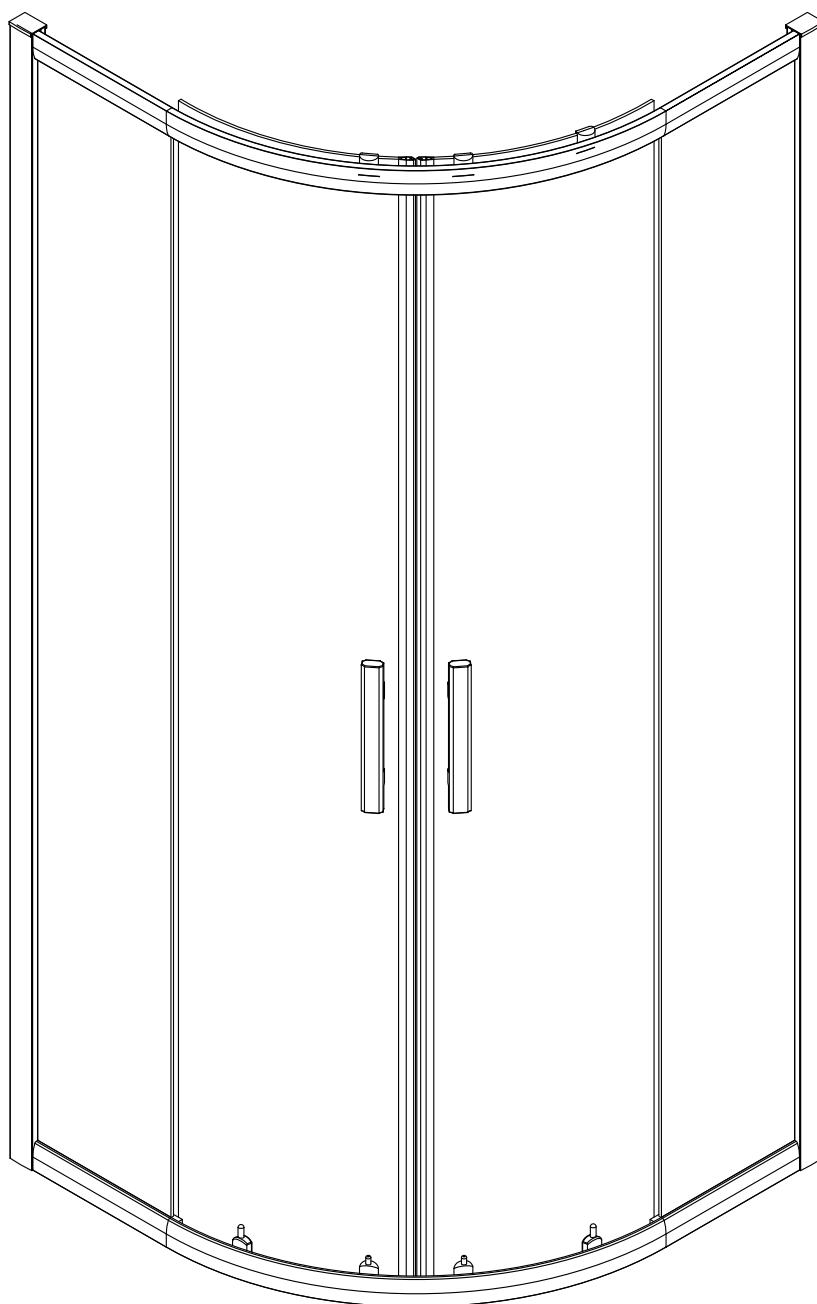
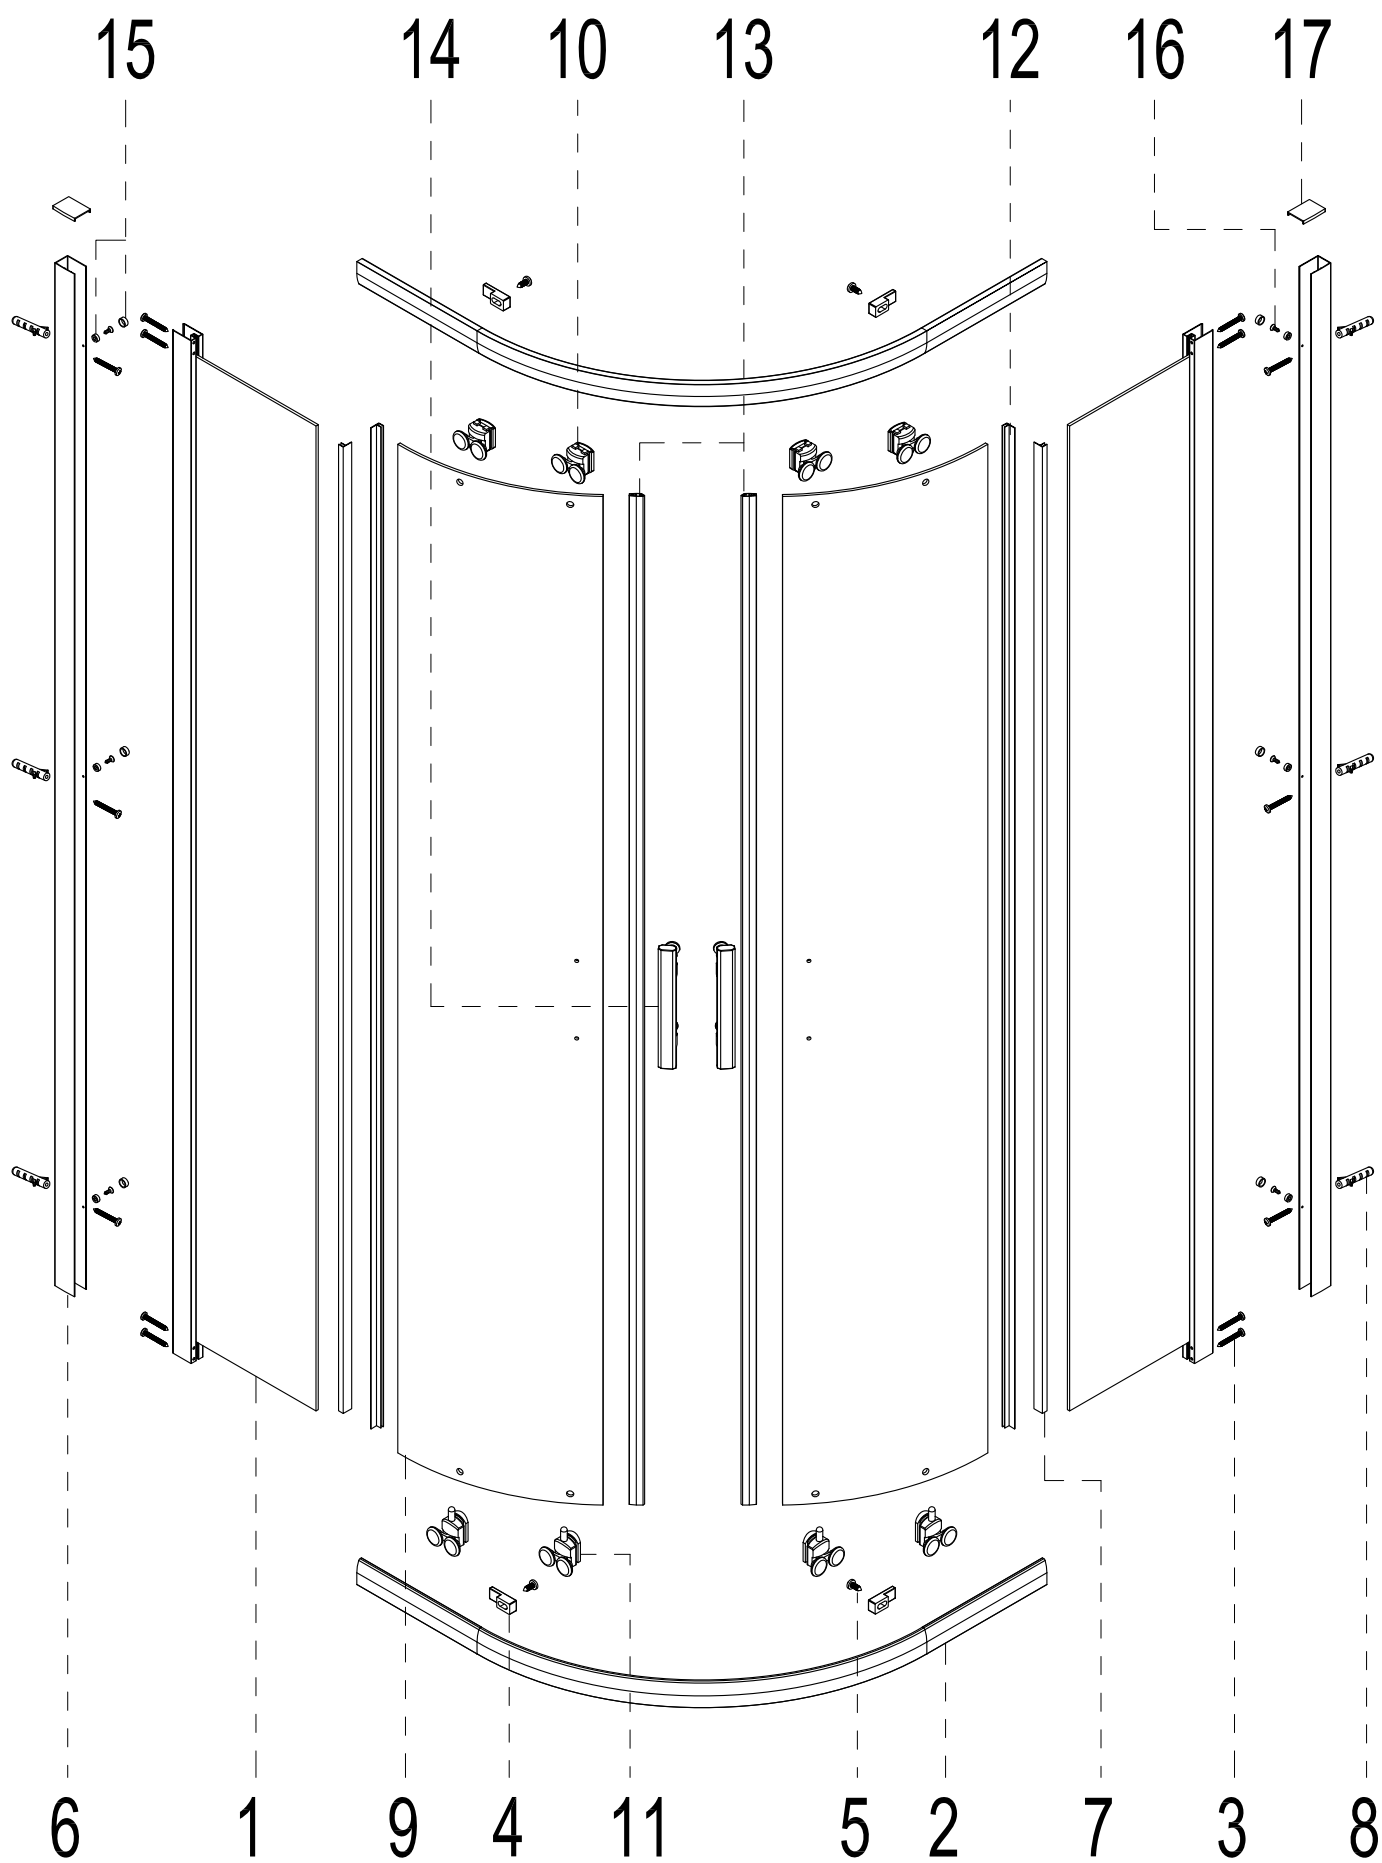








Δqua i






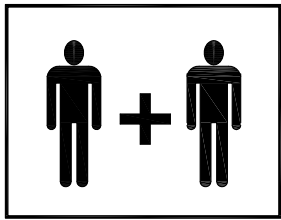

Ø6mm

Ø2.8mm

1



X2

2



X2


3



ST3.9X35

X14

4



X4


5



BT3.9X10


X4

6




X2

7




X2

8




X6

9




X2

10

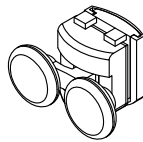

X4

11

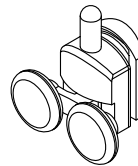


X4

12




X2

13




X1

14




X2

15



X6


16



ST3.5X10

X6


17








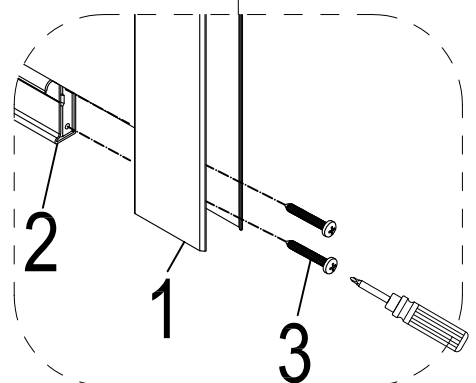
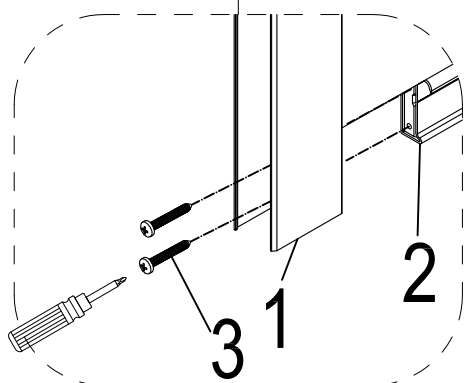
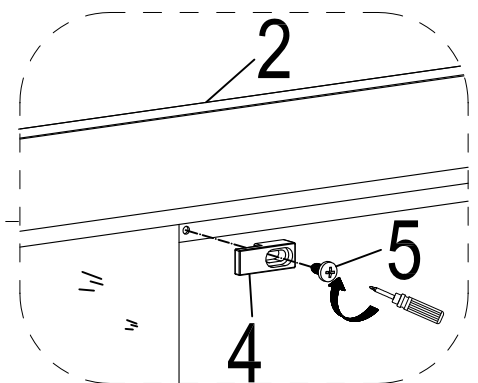
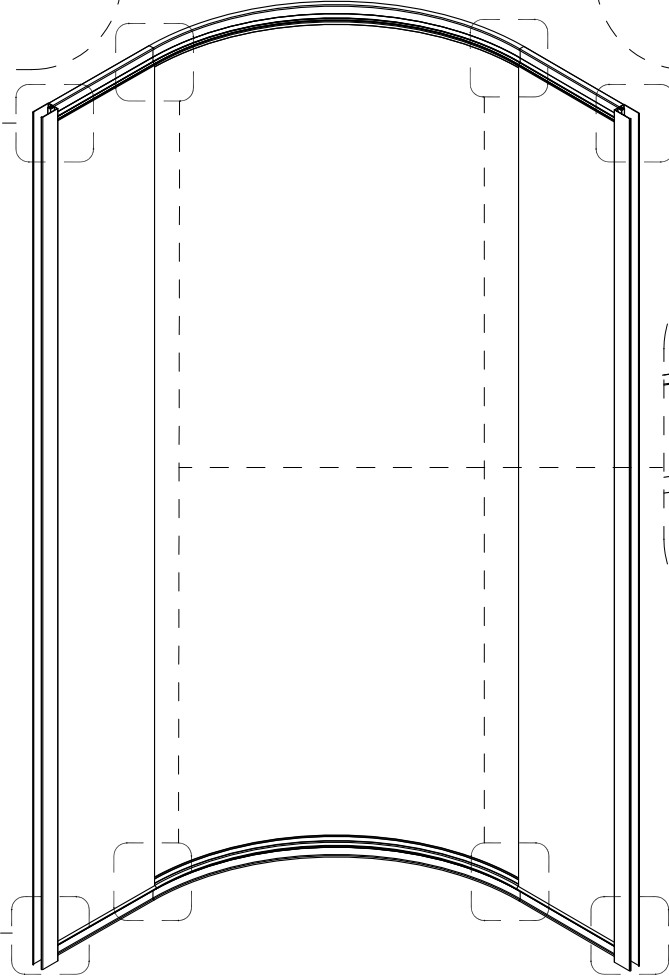
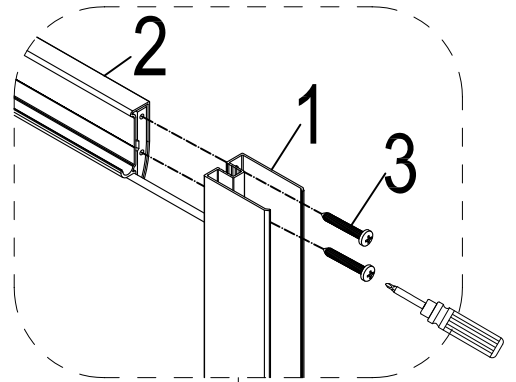
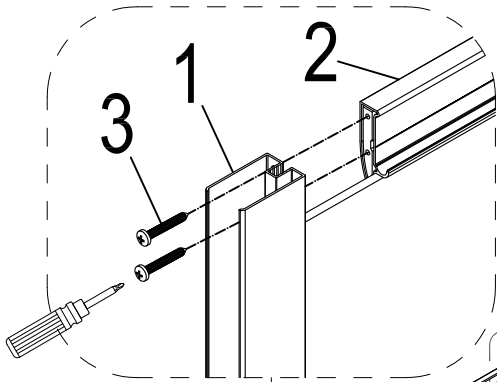
X2











Please Note: Shower Doors and Enclosures are Showerproof and not Waterproof.
You should never install shower heads aimed in the direction of the door or aim the shower head directly at the glass because this can cause leaks.





1  X2	2  X2	3  ST3.9X35 X8	4  X4	5  BT3.9X10 X4
--	--	--	--	--



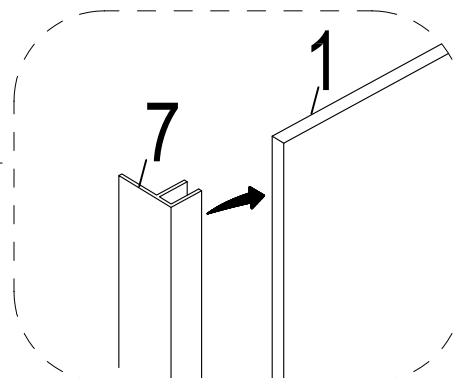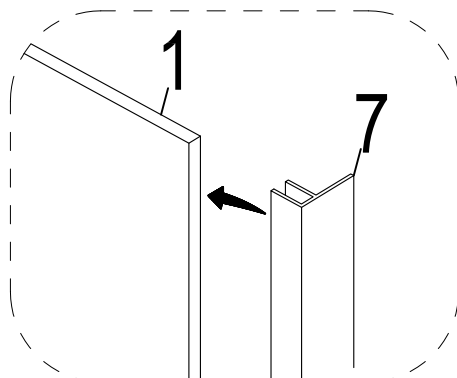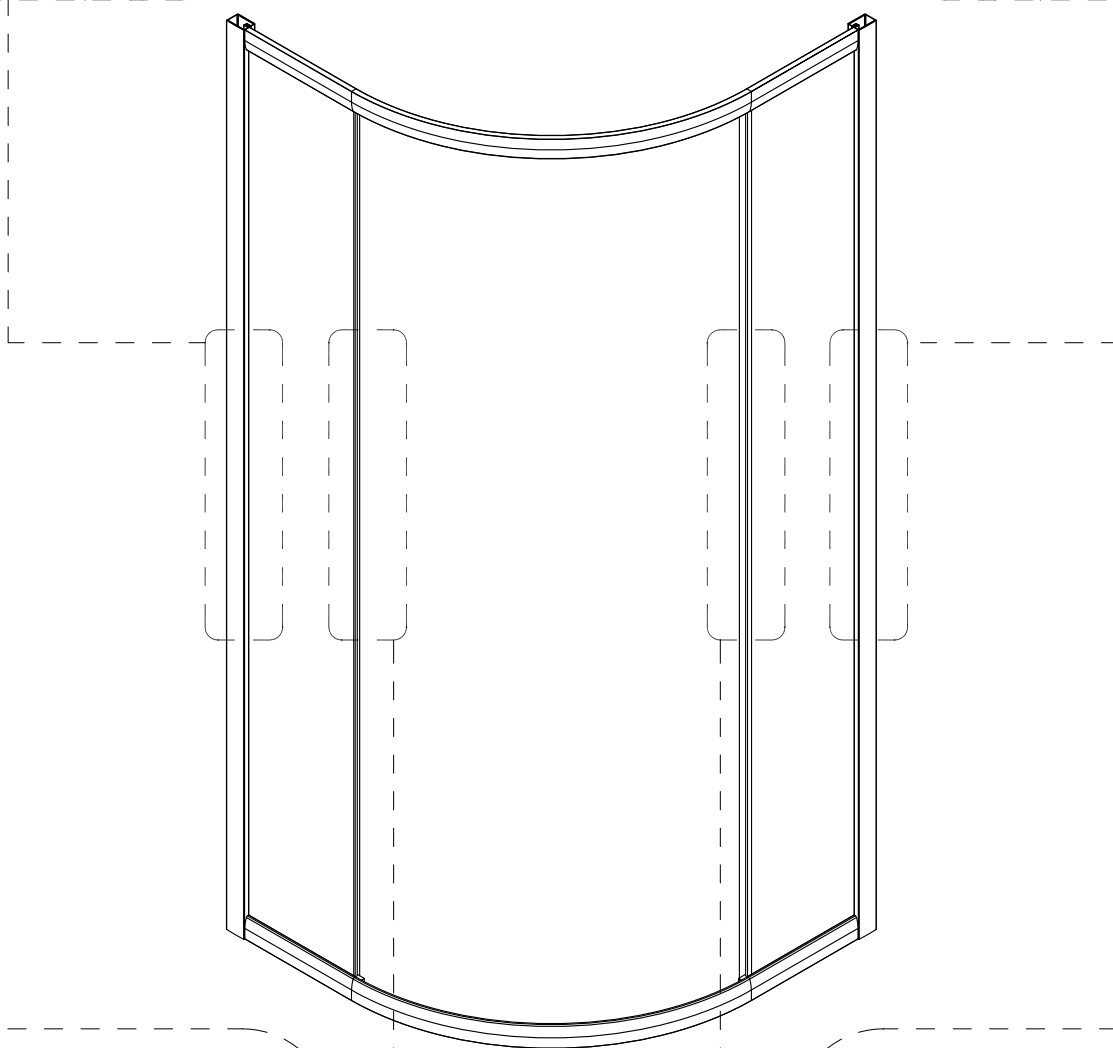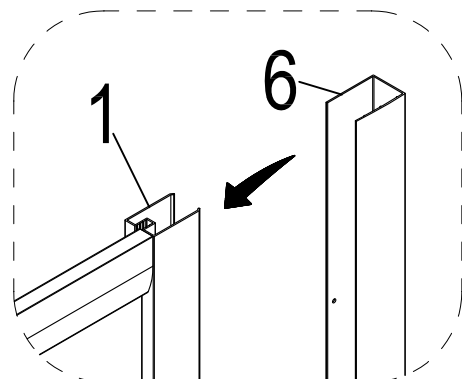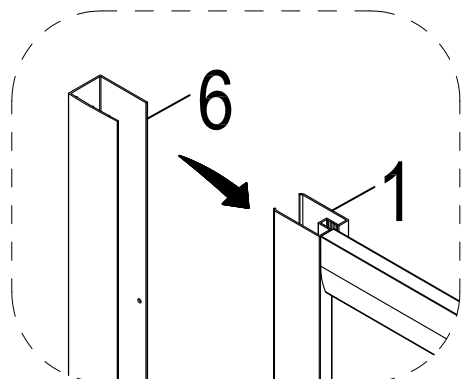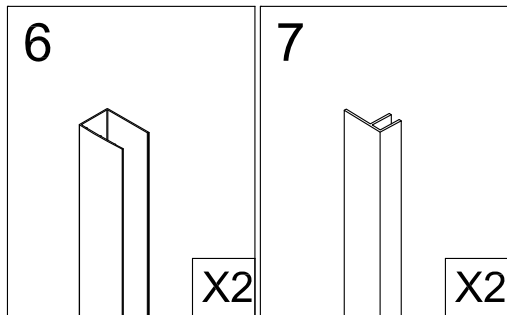

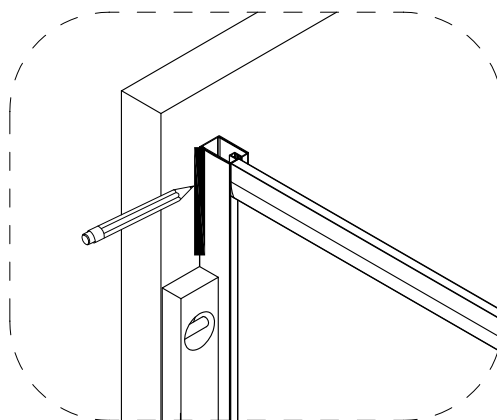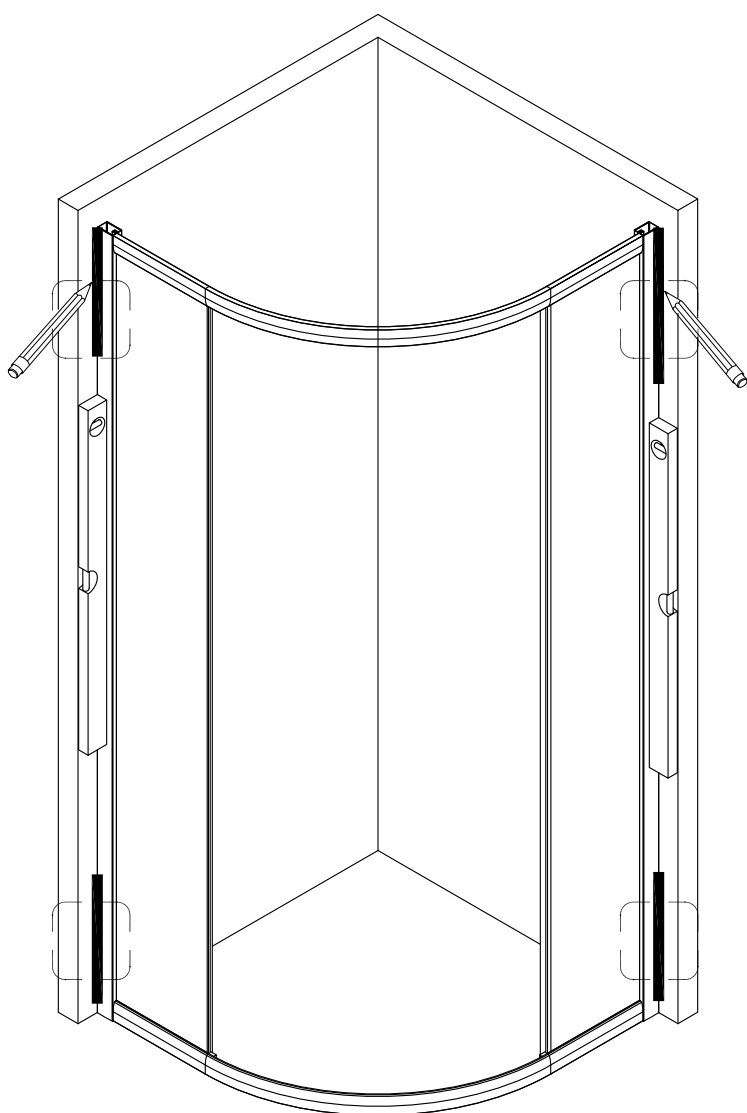




Ø6mm



8








X6

3









ST3.9X35




X6

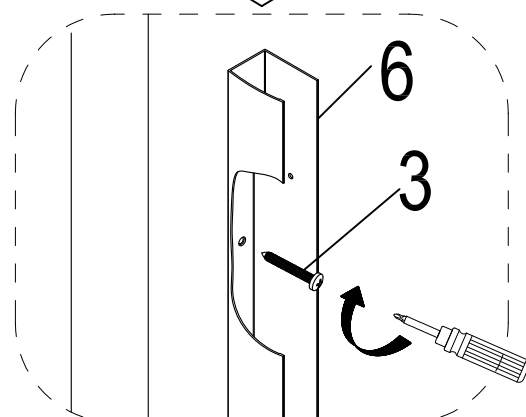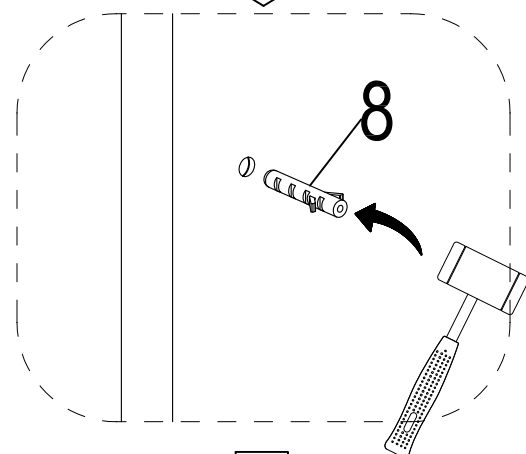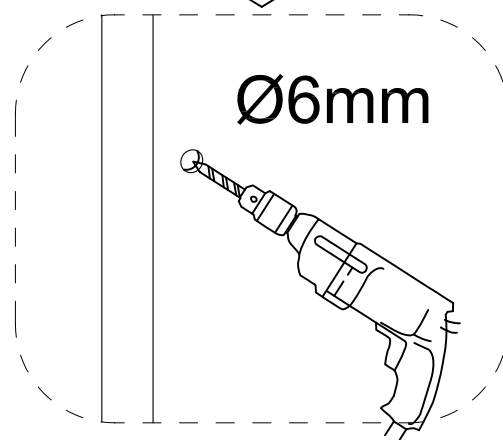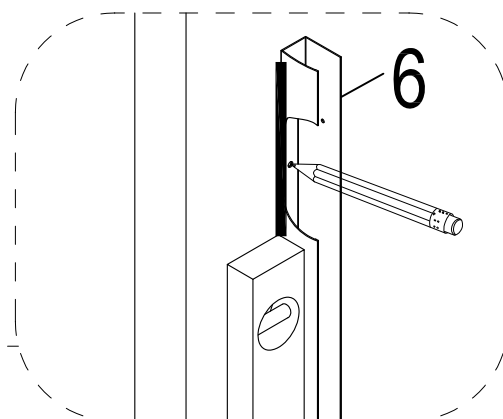
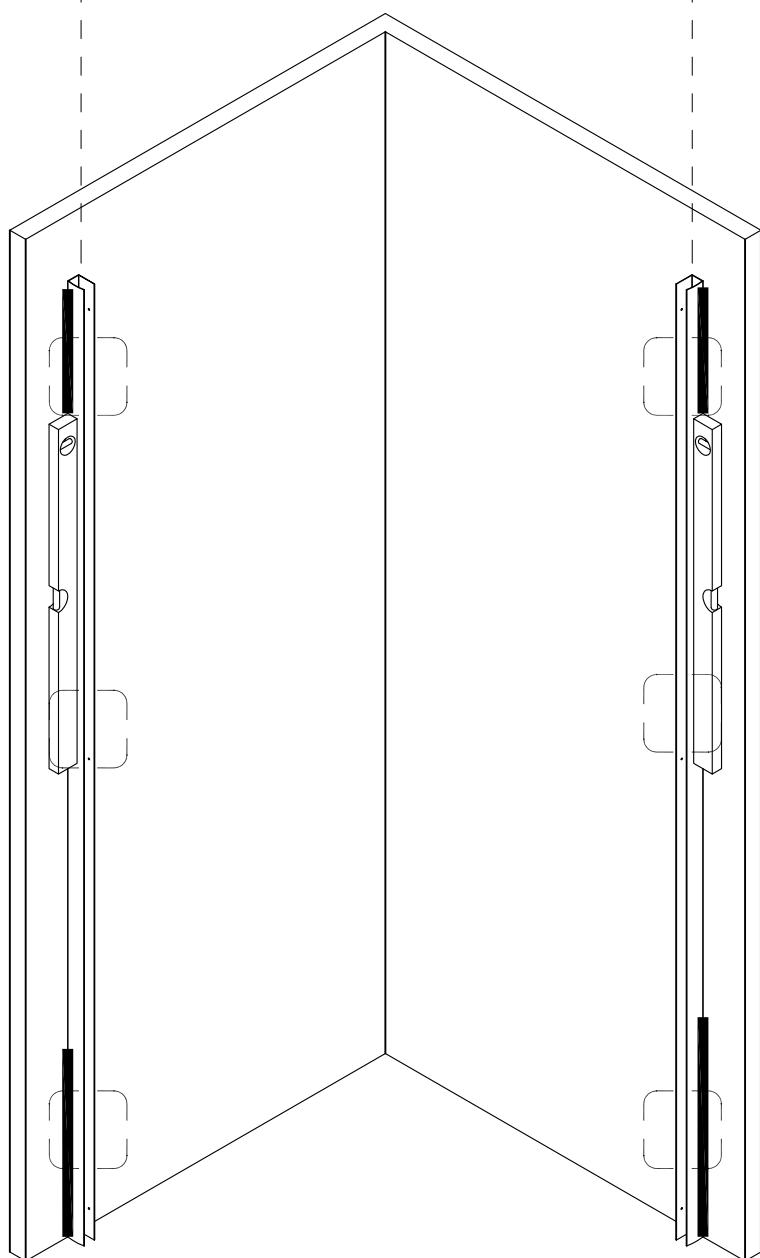



7

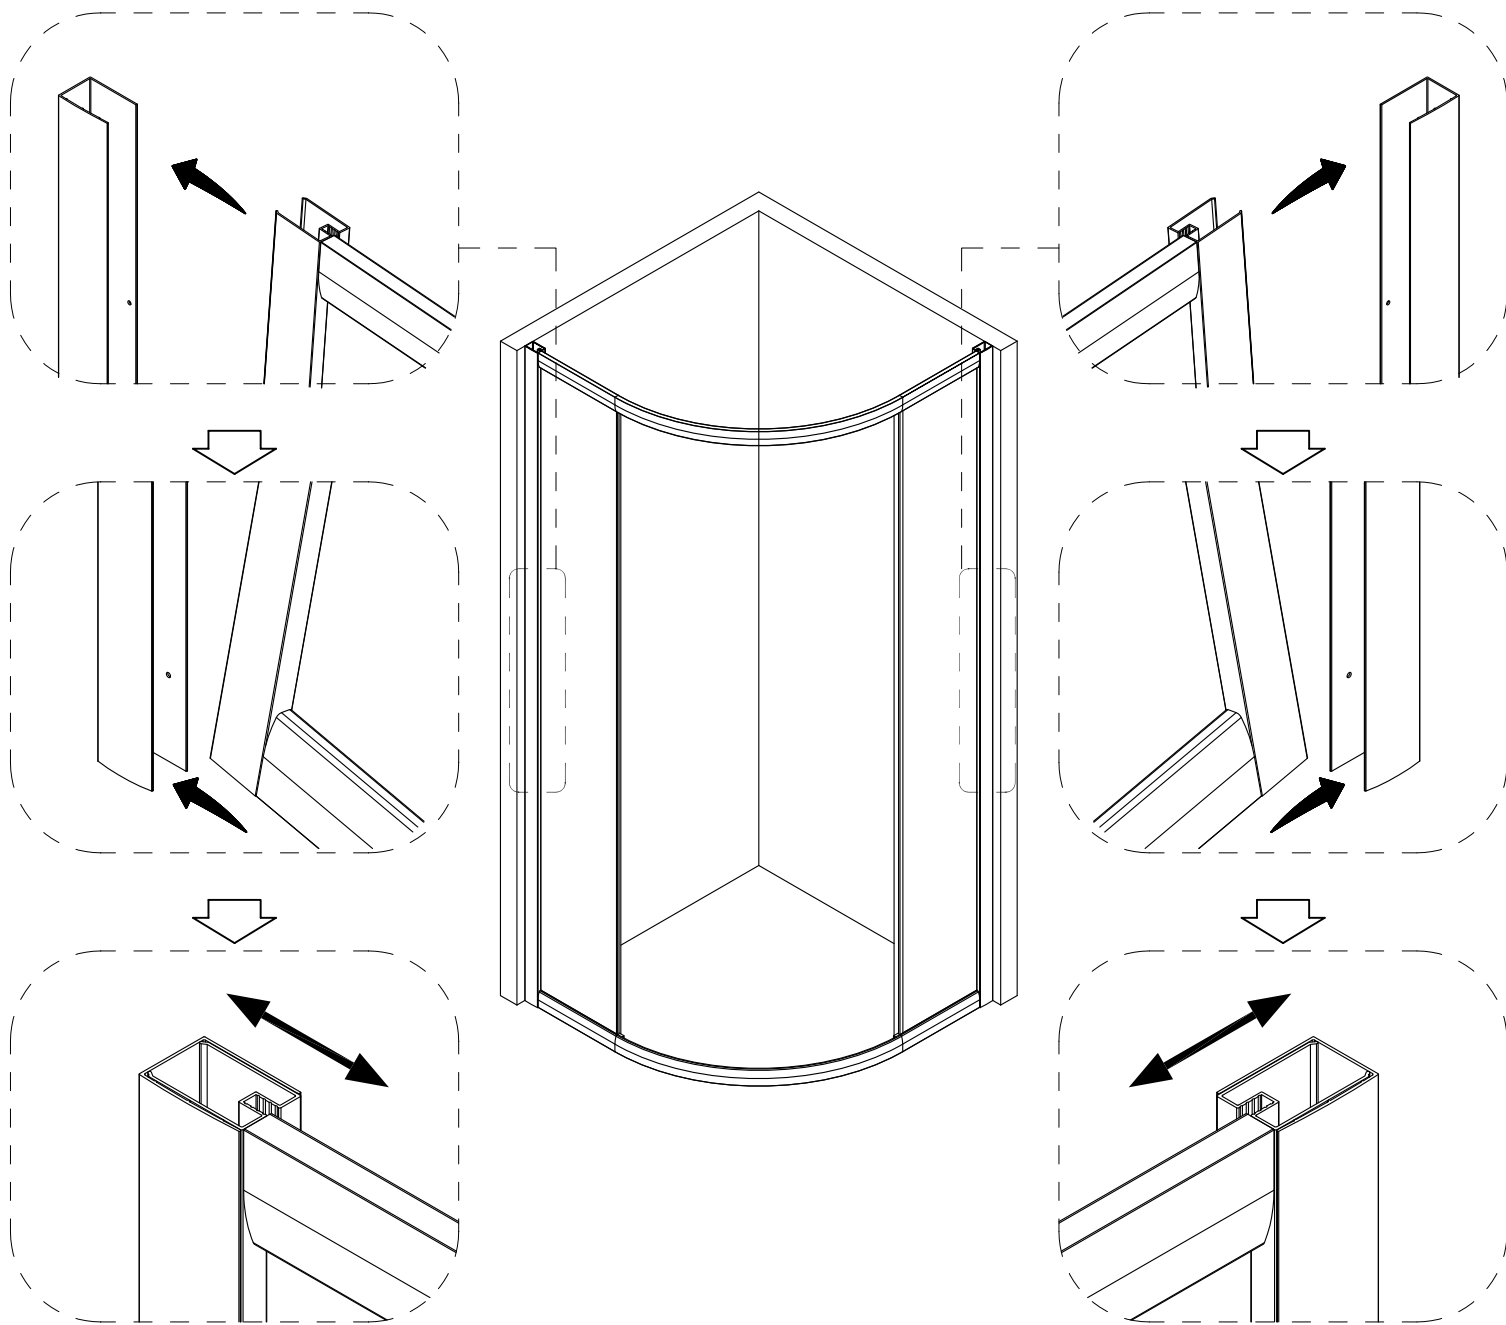

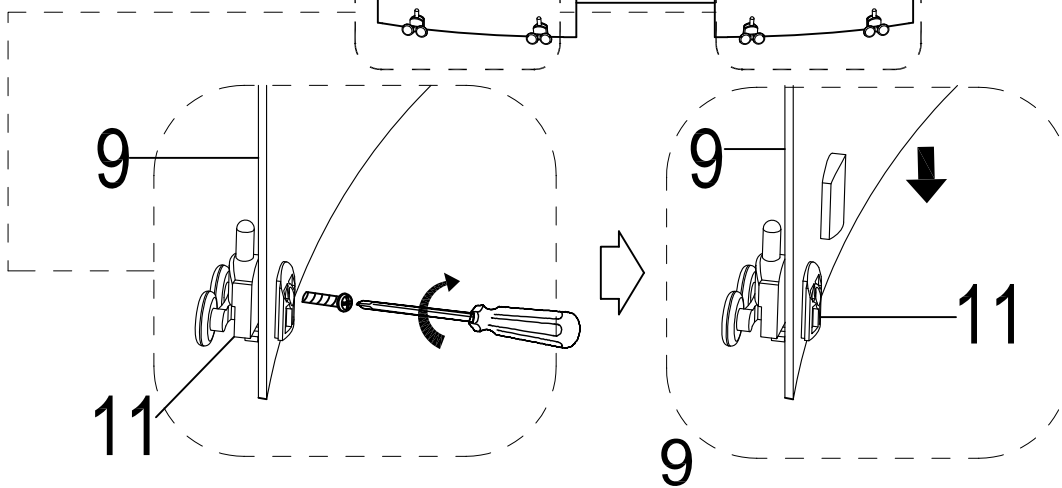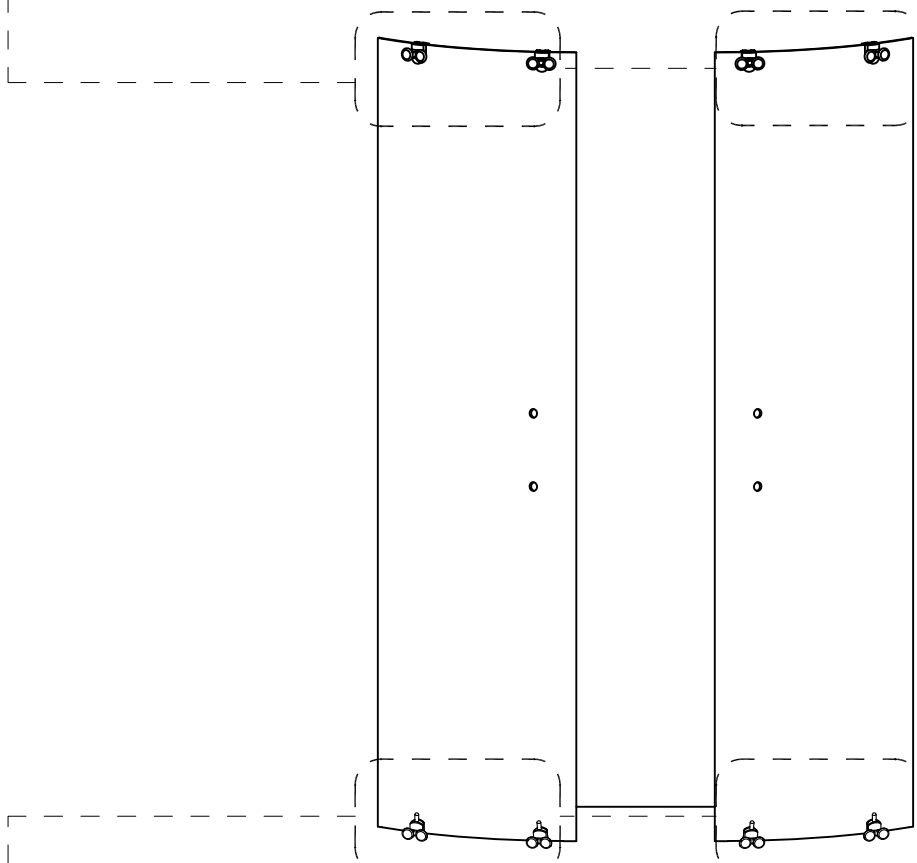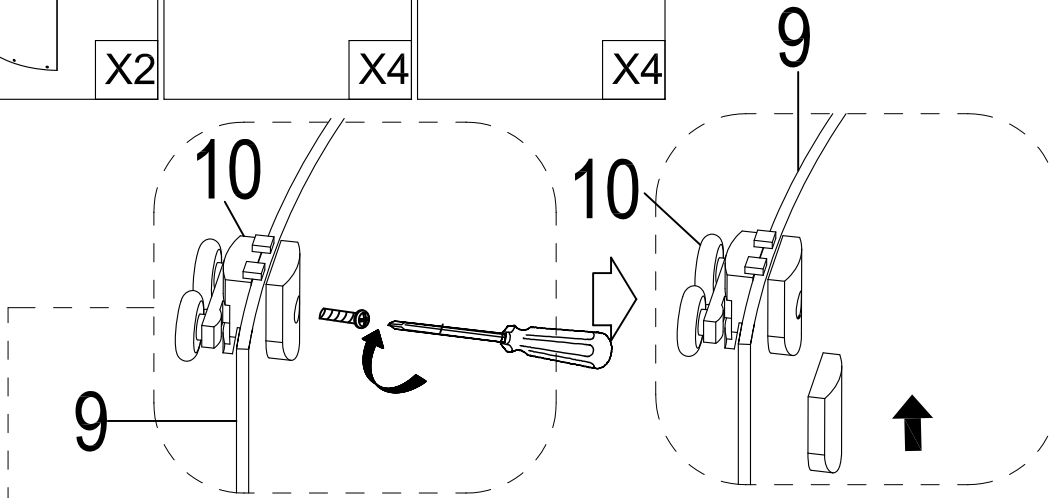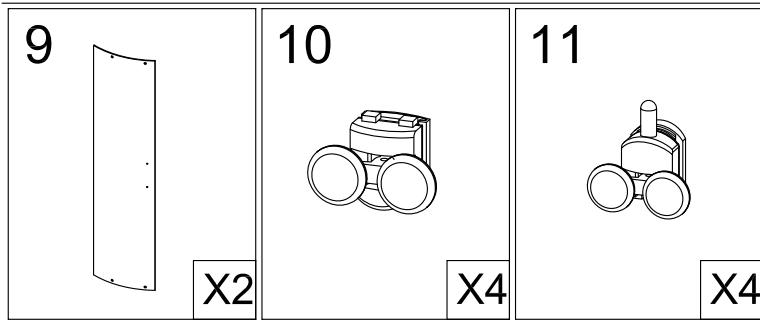

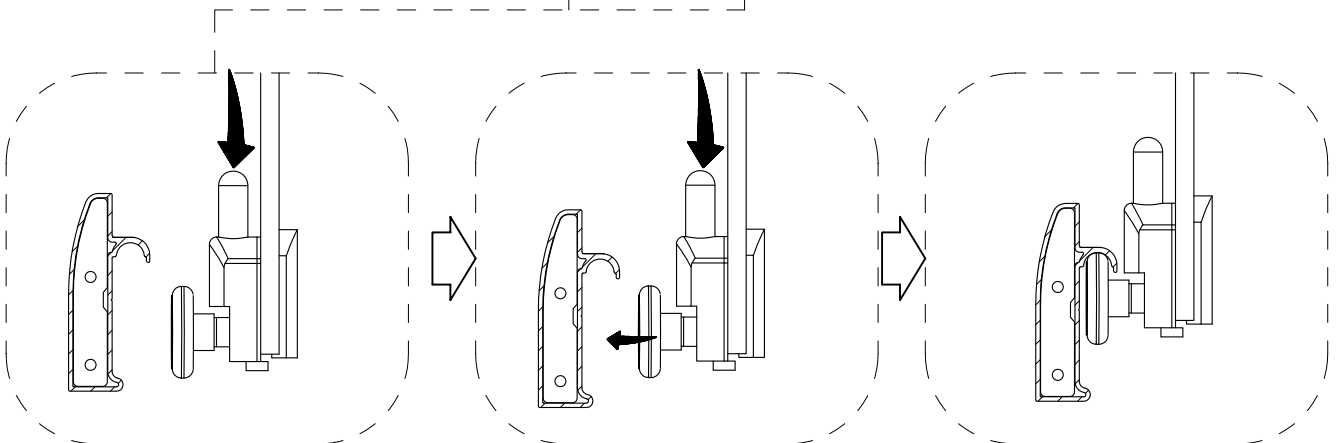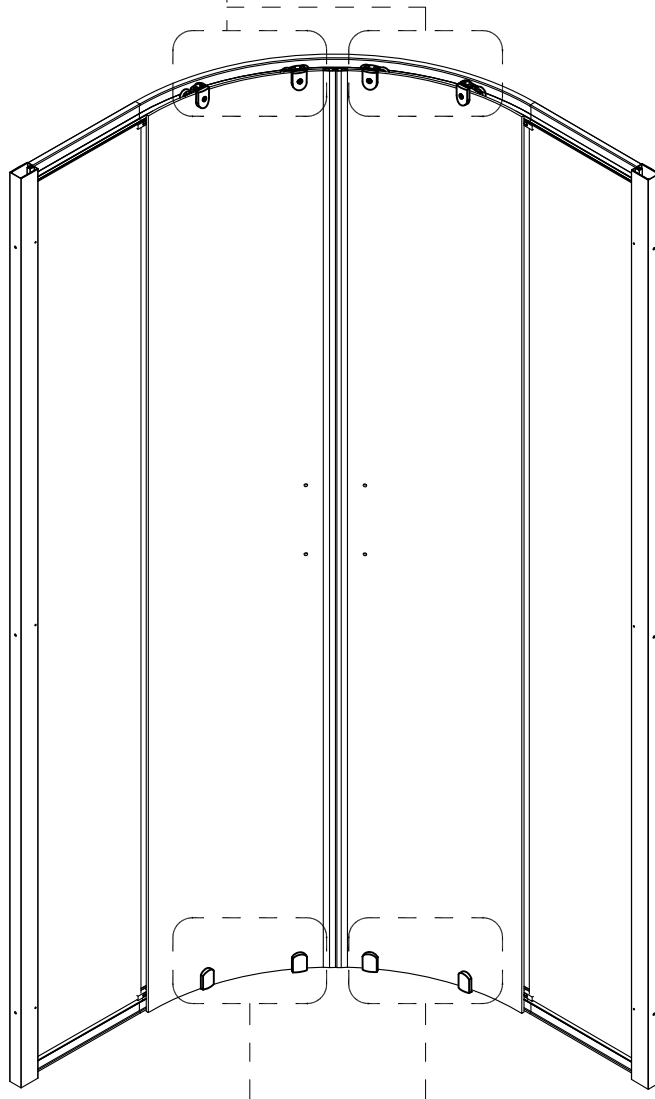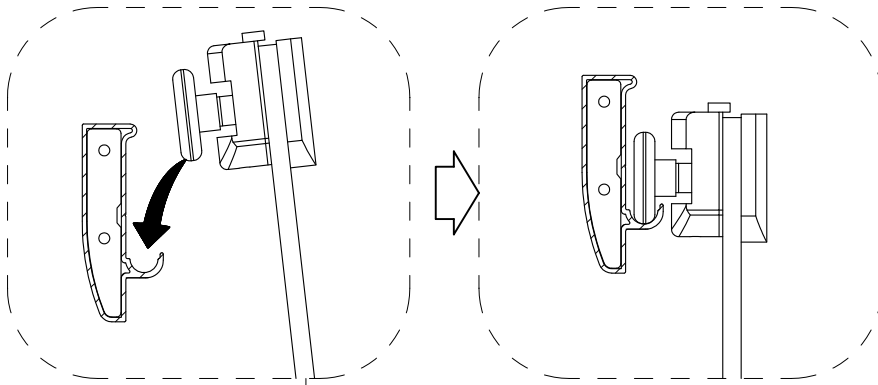


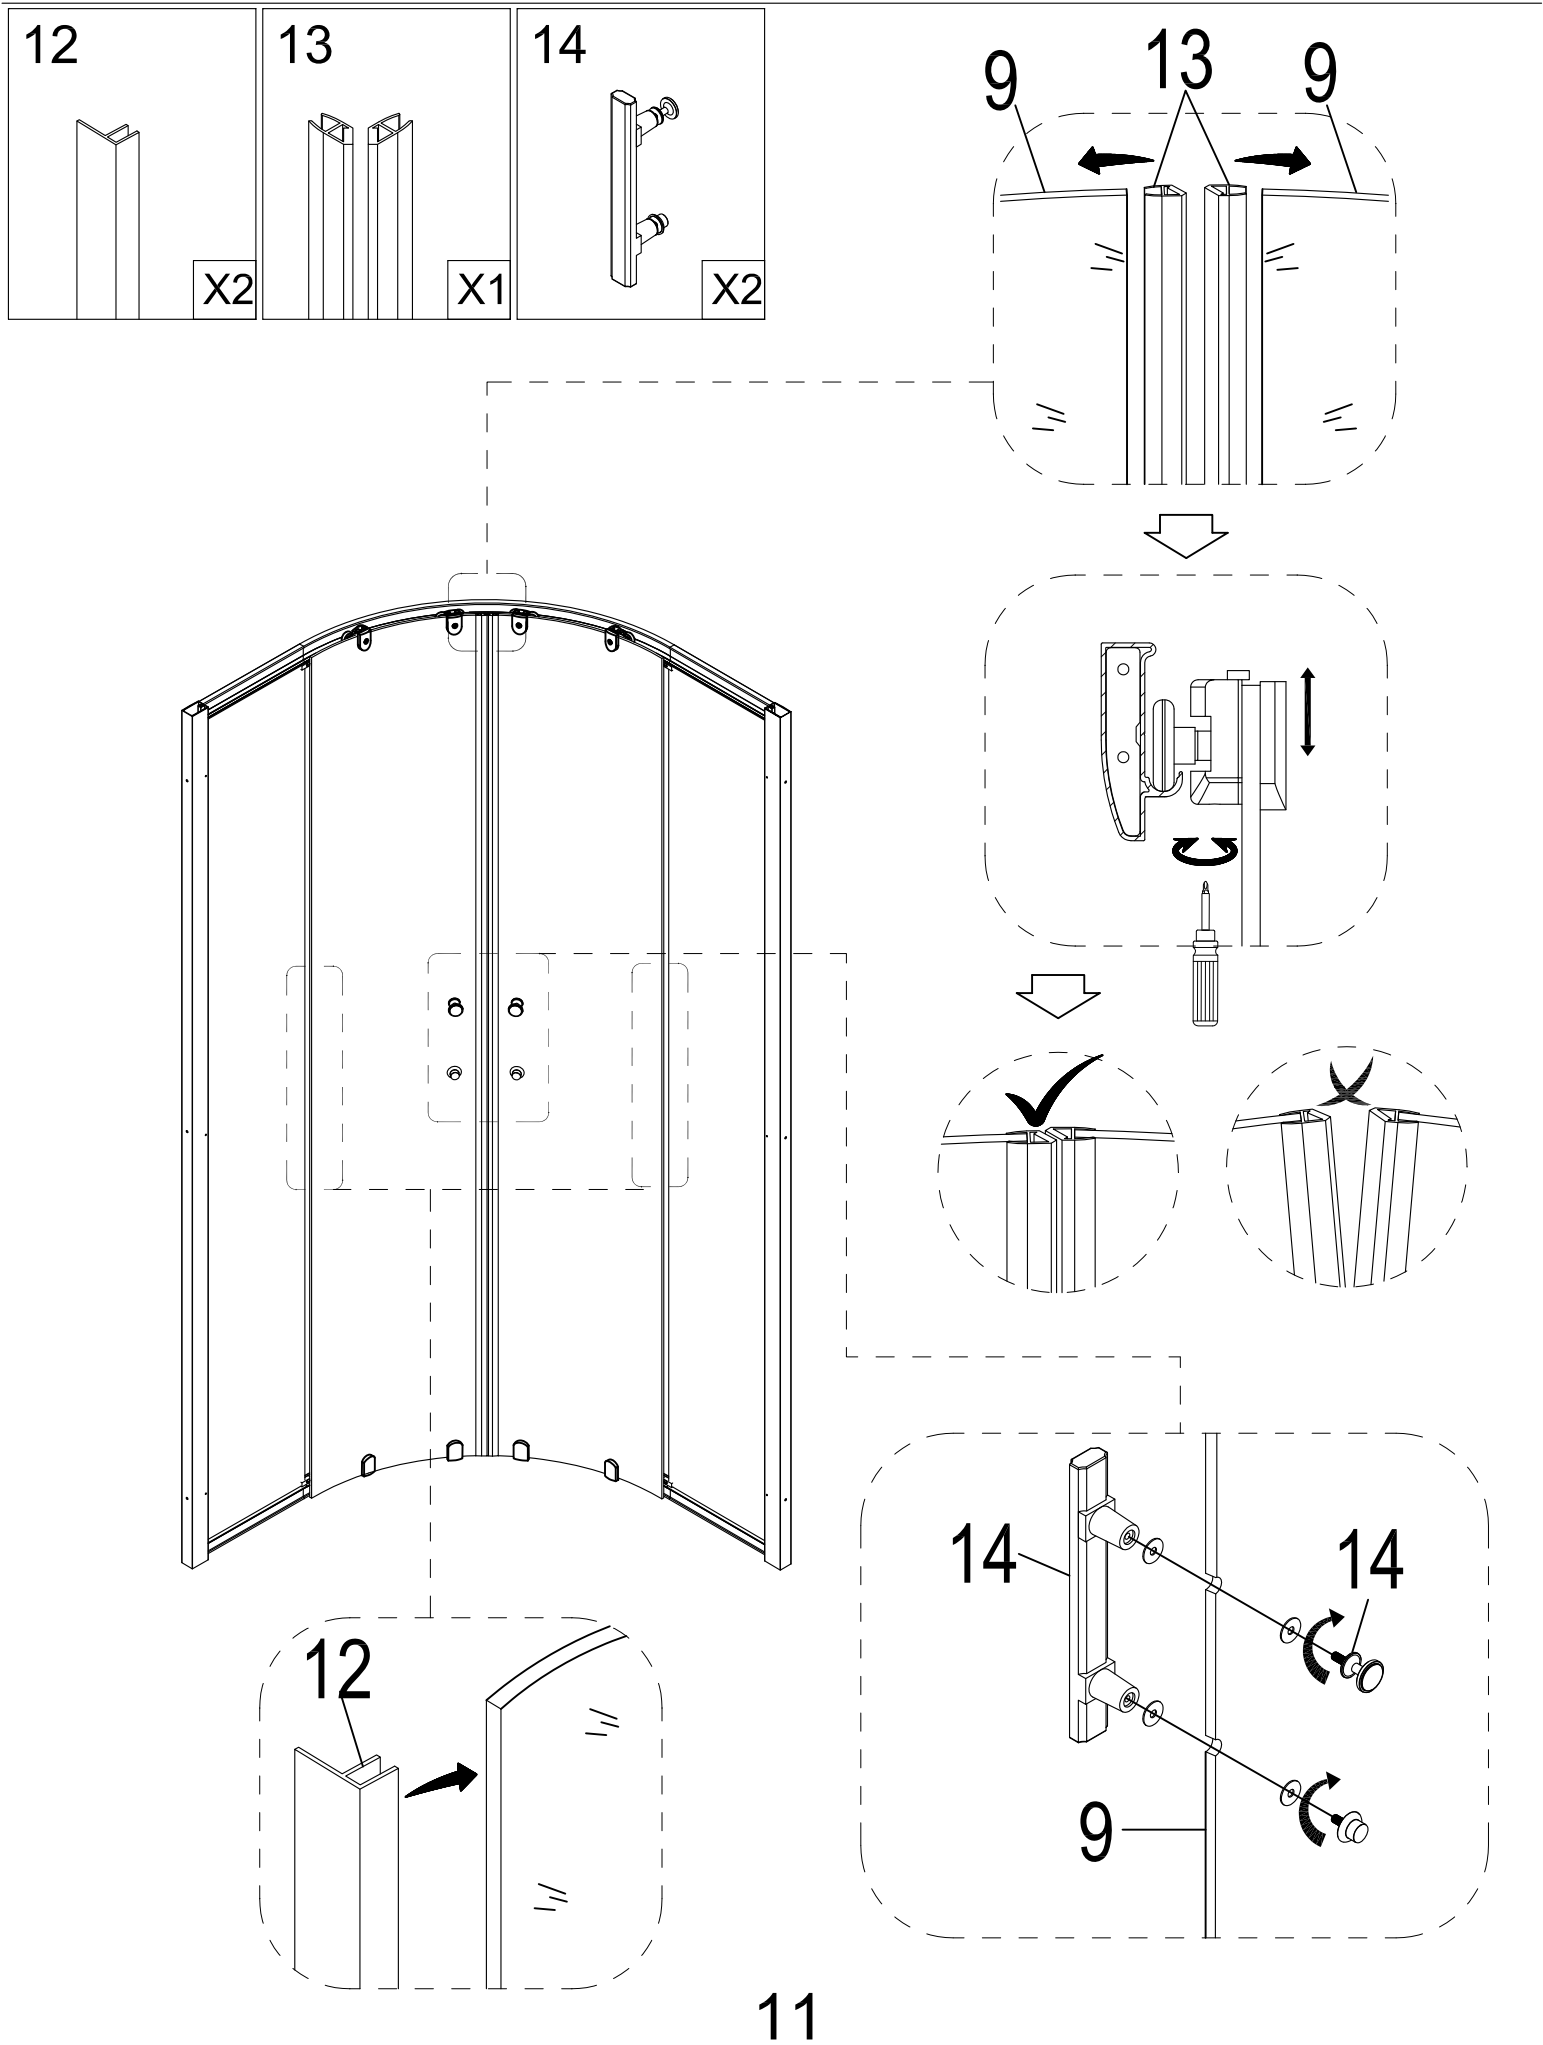




Ø2.8mm

15







X6

16




ST3.5X10

X6

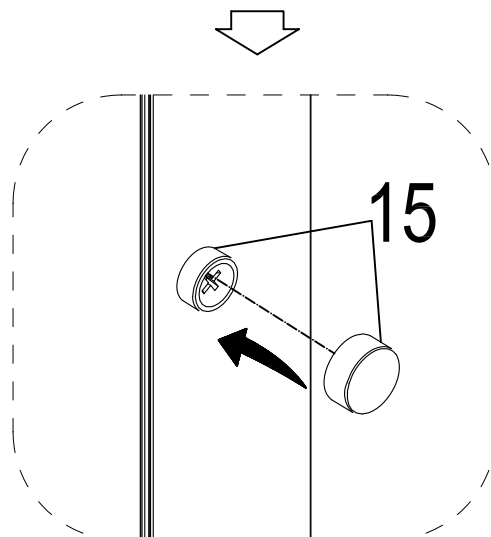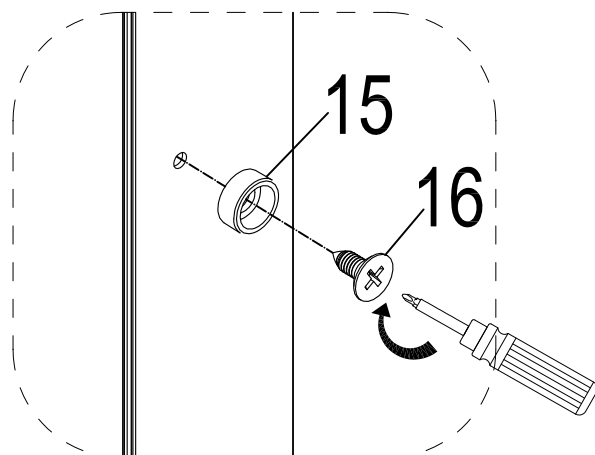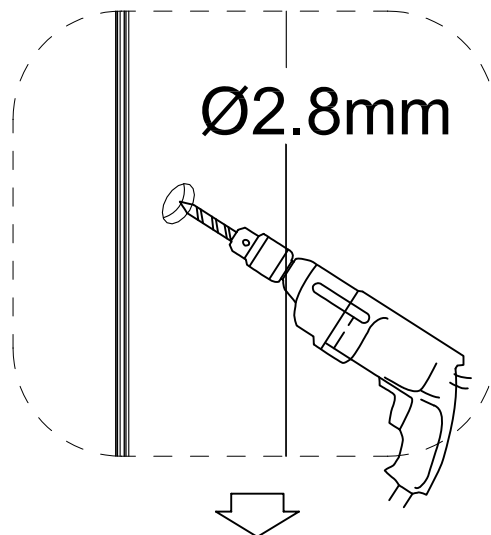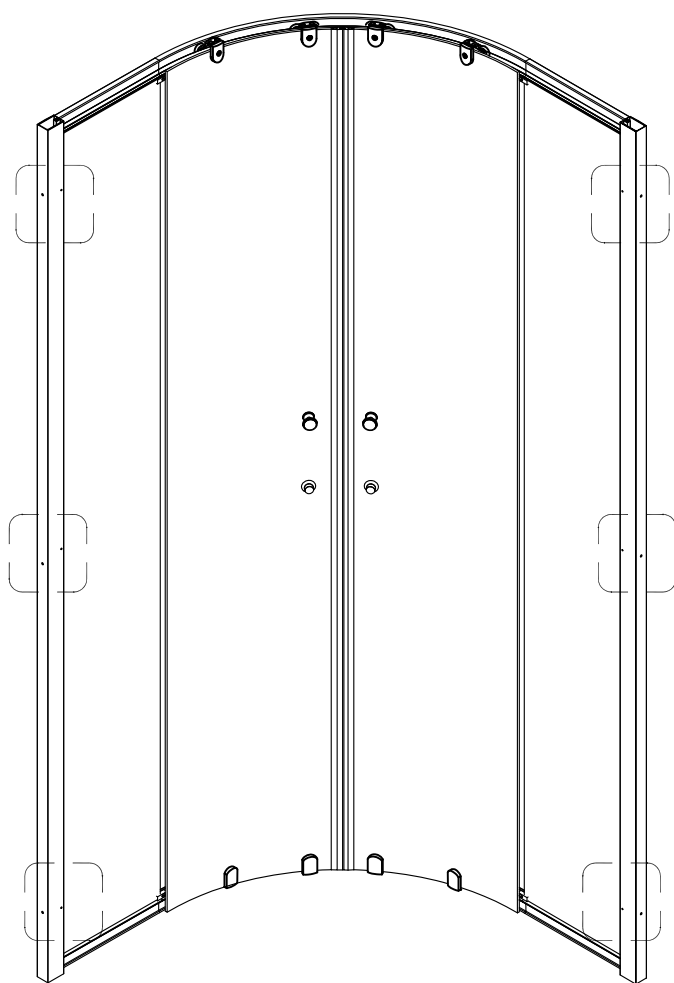

17



X2

